

**NOTE:** If you received a control module <u>AND</u> throttle, make sure to replace <u>BOTH</u> parts on your unit.

Tools Required: (Not included)

A. Phillips head screwdriver

**CAUTION:** To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before attempting these procedures. Failure to follow these steps in the correct order may cause irreparable damage.

# Step 1





Figure 1

# Step 2

Using a Phillips head screwdriver, remove the four screws in the seat compartment. Remove the seat compartment insert.

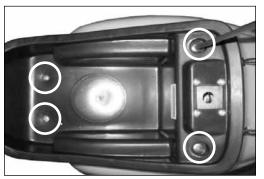


Figure 2

# Step 3

Using a Phillips head screwdriver, remove the three screws along the front bottom of the seat fairing cover. Before removing the cover, disconnect the white plastic connectors on the wires to the power switch and charger port.


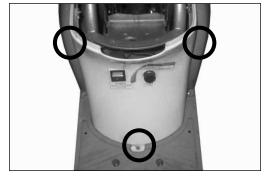


Figure 3

# Step 4

Carefully cut the zip ties holding the wires together. Disconnect the remaining white plastic connectors attached to the control module by depressing the tabs.

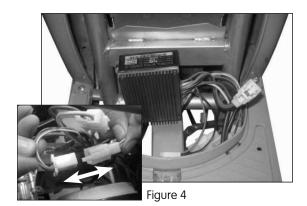

Need Help? Visit our website at www.razor.com or call toll-free at 866-467-2967 Monday - Friday 8:00am - 5:00pm Pacific Time.

# Step 5

Using a Phillips head screwdriver, remove the two screws holding the control module in place.

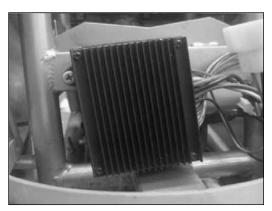


Figure 5

# Step 6

Install the new control module using the same two screws previously removed. Reconnect the five white plastic connectors.

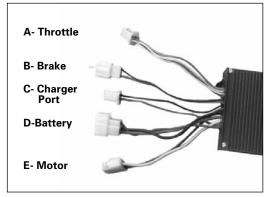


Figure 6

# Step 7

### Reverse steps:

- 1. Reattach the front seat fairing cover and secure with three Phillips screws previously removed.
- 2. Reattach seat compartment insert using the four screws previously removed and close the seat.

ATTENTION: Charge unit at least 18 hours before riding.