

New Zoomer Auto Flex Key FOB Sync Instructions

1. Turn on scooter.



2. Turn Scooter on to its side and locate the wireless receiver. When located press the black button on the side. It will beep 4 times.



3. Press and hold the “A” button on the key fob until the wireless receiver beeps 3 times. Then release the button.



4. The key fob is now synced to the scooter.