





FlashStand FAT

for 26" Mountain Bike

User's Guide


* Please read all instructions and caution notes carefully before use.

* Maximum Weight Load: 20 kgs / 44 lbs

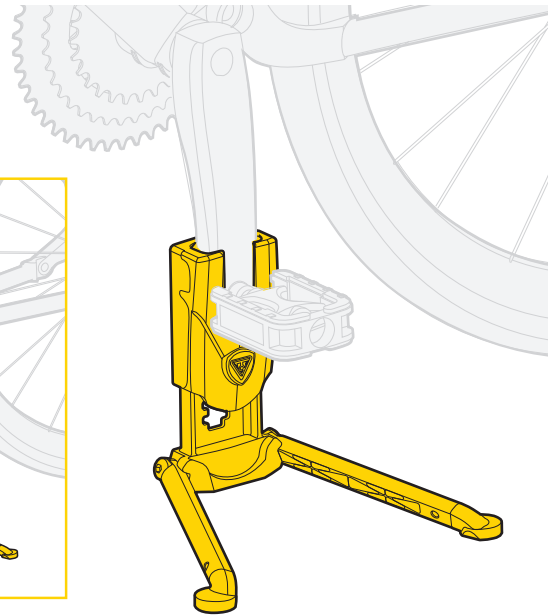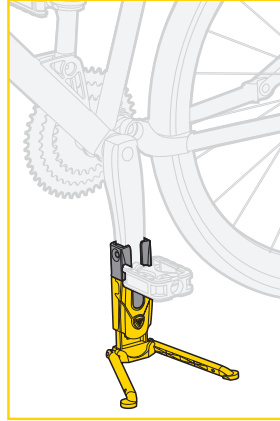


IMPORTANT NOTES


- A** **1** FlashStand FAT is designed to be used on bikes with crank-arm width less than 45mm (1.8") at top 60mm (2") insert.

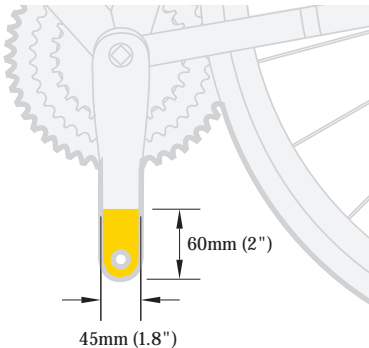


- 2** FlashStand FAT is designed to be used on bikes with crank-arm distance from the ground between 80mm and 180mm (3.2" ~7").

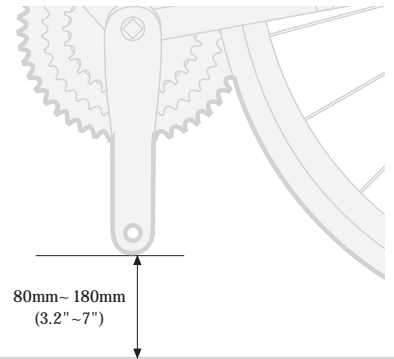


- B** If support legs on FlashStand FAT become loose, tighten its bolts as shown. Do not over tighten the bolts as this may damage the support legs.

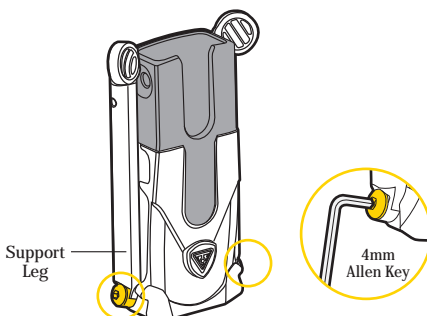

- C** Adjust FlashStand FAT height to make sure your bike is within the recommended angle of 83°~86° (from horizontal plane) for stability of your bike. Improper installation or lean angle may cause your bike to fall and cause damage to it and/or FlashStand FAT.

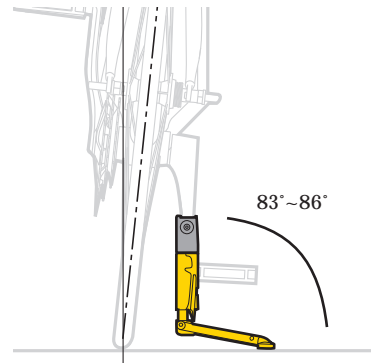


INSTALLATION

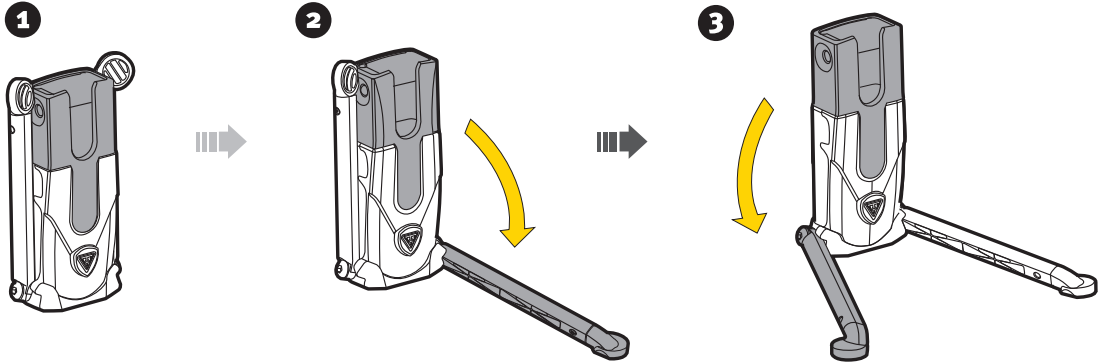




4

Adjusting
FlashStand FAT
height

When crank-arm width is larger
than 36mm, remove the top plate
of FlashStand FAT before installing.

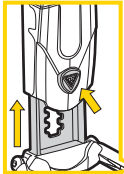

PRESS

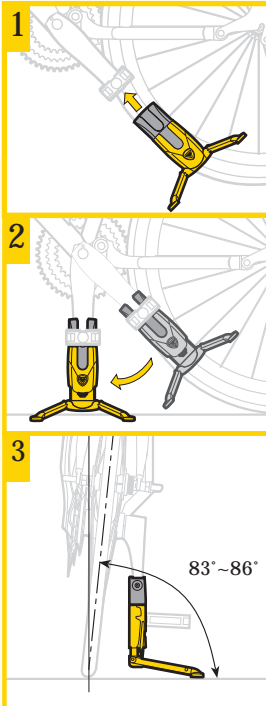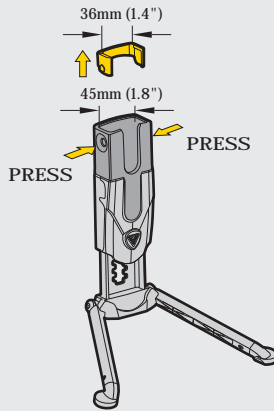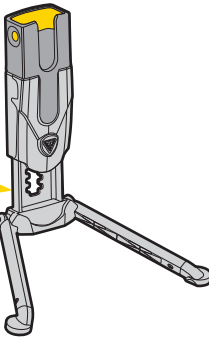

• FlashStand FAT is NOT recommended for use on downhill or freeride mountain bikes because their bottom bracket height designs may be beyond the FlashStand FAT support limitations.

• Adjust FlashStand FAT height to make sure your bike is within the recommended angle of 83° ~ 86° (from horizontal plane) for stability of your bike.

CAUTION

- Remove any large or heavy bicycle accessories (handlebar bag, rack bag, large saddle bag, pannier bags, etc.) that may cause any possible injury.
- Never exert force on the bike when using FlashStand FAT. Doing so may damage FlashStand FAT's support legs.
- Not recommended for use on grass, loose dirt, gravel, uneven or soft surfaces.
- Topeak FlashStand FAT is designed for supporting your bike only.

WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only.

Warranty Claim Requirements

To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user abuse, overload, system alteration, modification, or used in any way not intended as described in this user's guide.

* The specifications and design are subject to change without notice.

Topeak products are available only from professional bicycle shops. Please contact your nearest Topeak authorized bicycle dealer for any questions.

For customers in the USA, call: 1-800-250-3068

Website: www.topeak.com

Copyright © Topeak, Inc. / 2008

M-TW007-GB 9/08