




# Included Hardware

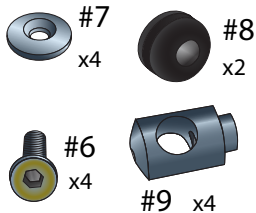

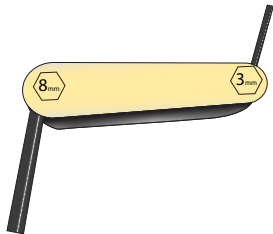


Tools  
Needed


Assemble the posts by placing the number 2 washer on to bolt 1. Then slide them through post 3. After you slide bolt 1 through number 3 place the number 4 washer on to bolt one. At this point make sure you apply anti seize lubricant to the threads on bolt 1. After the anti-seize has been applied hand tighten bolt 1 into anchor nut 5. Repeat this process again for the second post.

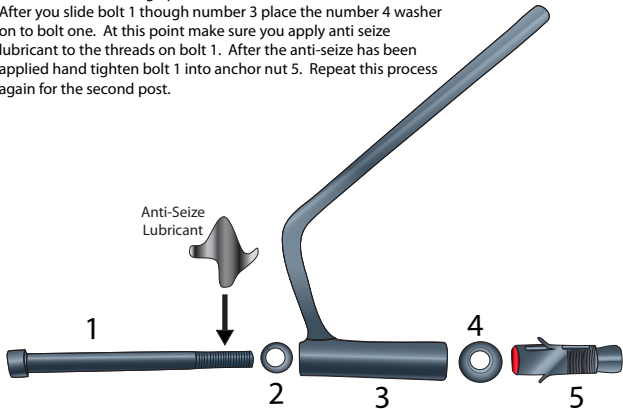

On the underside of the headset there are two holes, one on the right and left sides of the headset. These are the holes that the posts slide into.

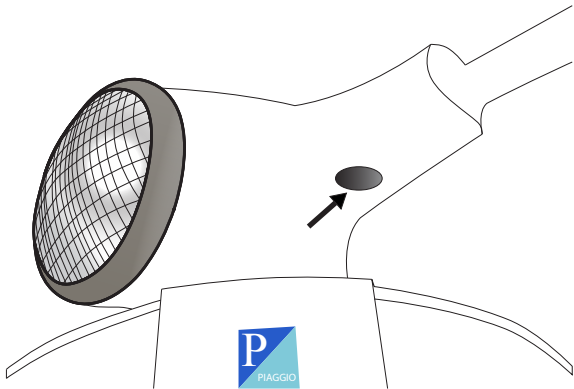

Slide the posts into the holes and gently hammer them in. Then finish tightening them.

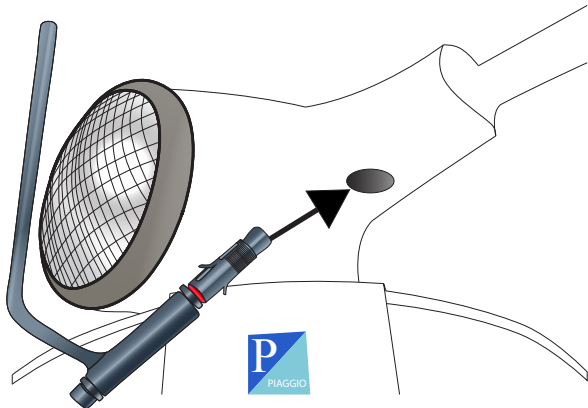

Place the grommets into the holes in the windshield. Then put washer 7 onto bolt 6. Slide them through the grommets and attach them to post holders 9. Slide the posts through the post holders 9. Adjust the height of your windscreen and then tighten the holders using the hex bolts 6.




#6




#7




#8

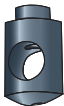

#9

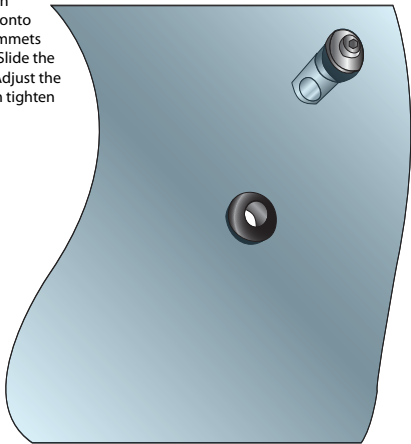

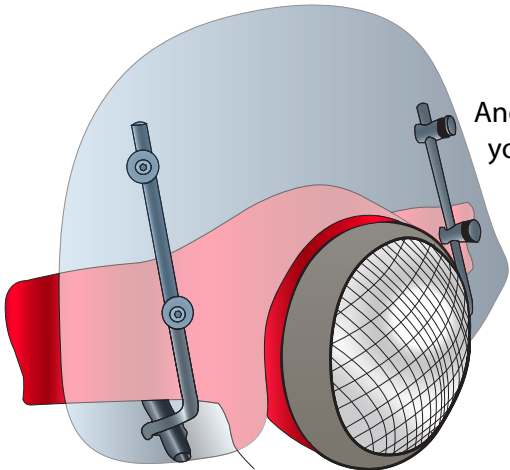

And now bam  
you're done!