



SIGMA[®]
GERMANY

sTs

SPEED
DIGITAL
WIRELESS

HRM
DIGITAL
WIRELESS

CAD
DIGITAL
WIRELESS

**IAC
ALTI**
BAROMETRIC

**LAP
COUNT**

**DATA
LOG**

**MULTI
SPORT**

**PC
MAC**
READY



ROX 6.0

BIKE COMPUTER WITH ALTITUDE

Contents

1	Functions and packaging contents	7
1.1	Foreword	7
1.2	Contents	7
1.2.1	Optional accessories	8
1.3	ROX 6.0 functions	9
1.3.1	PC interface	9
2	Attaching the ROX 6.0 and initial use	10
2.1	Attaching the bracket	10
2.2	Attaching the transmitter – speed and cadence	10
2.3	Attaching the magnets – speed and cadence	10
2.4	Putting on the chest belt	10
2.5	Setting up BIKE 2	10
2.6	Attaching the SIGMA ROX 6.0 to the bracket	10
2.7	Initial use	11
2.8	Synchronizing the sensors	11
2.8.1	Synchronizing the speed	11
2.8.2	Synchronizing the cadence	11
2.8.3	Synchronizing the chest belt	11
2.8.4	Resetting the synchronization	12
3	Operating concept	13
3.1	Button functions	13
3.1.1	Button functions in bike mode	14
3.1.2	Button functions in hiking mode	14
3.2	Display structure	15
3.2.1	Top display segment	15
3.2.2	Middle display segment	15
3.2.3	Bottom display segment	15
4	Basic settings	16
4.1	Setting the language	16
4.2	Setting the unit of measure	16
4.3	Setting the air pressure at sea level	16
4.4	Setting the actual altitude	17
4.5	Setting the home altitude	17
4.6	Setting the wheel size for bike 1 or bike 2	17
4.6.1	Calculating the wheel size	17
4.7	Setting the clock	18
4.8	Setting the date	19
4.9	Setting your age	19

4.10	Setting your weight.....	19
4.11	Setting your gender.....	20
4.12	Setting the maximum heart rate.....	20
4.13	Setting the training zone.....	20
4.13.1	Displaying the training zone in normal mode.....	21
4.14	Setting the intensity zones 1, 2, 3, and 4.....	21
4.14.1	Displaying the intensity zones in normal mode.....	22
4.15	Setting the total distance for bike 1 or bike 2.....	22
4.16	Setting the total trip time for bike 1 or bike 2.....	22
4.17	Setting the total hiking time.....	23
4.18	Setting the total altitude for bike 1 or bike 2.....	23
4.19	Setting the total hiking altitude.....	24
4.20	Setting the total calories for bike 1 or bike 2.....	24
4.21	Setting the total hiking calories.....	24
4.22	Activating the zone alarm.....	25
4.23	Setting the contrast.....	25
4.24	Exiting the basic settings.....	25
5	General ROX 6.0 functions.....	26
5.1	Display backlight.....	26
5.2	Speed comparison.....	26
5.3	Lap counter.....	26
5.4	Opening the lap view.....	27
5.5	Calibrating the start altitude.....	27
5.6	Stopwatch.....	27
5.7	Countdown.....	27
5.8	Setting the trip climb or descent.....	28
5.9	Resetting trip data.....	28
5.10	Total values for bike 1 and bike 2.....	28
5.11	Service interval.....	28
5.12	Transport more.....	29
5.13	PC interface/Downloadable.....	29
5.14	Wired speed transmission.....	29
6	Hiking with the ROX 6.0.....	30
6.1	Synchronizing the chest belt.....	30
6.2	Starting the hiking time.....	30
6.3	Setting the target time.....	30
6.4	Resetting hiking trip data.....	31
7	Altitude measurement (IAC).....	32
7.1	Calibrating the altitude.....	32

8	Important information, troubleshooting, FAQ	33
8.1	Important information	33
8.1.1	ROX 6.0 water resistance.....	33
8.1.2	Water resistance of the transmitter (optional accessory)	33
8.1.3	Chest belt care (optional accessory)	33
8.1.4	Training advice	33
8.2	Troubleshooting.....	34
8.3	Frequently asked questions (FAQ).....	35
9	Technical data	36
9.1	Max, min, and default values	36
9.2	Changing the batteries	38
9.3	Temperature, batteries	38
10	Warranty and guarantee	39
11	Index	41

1 Functions and packaging contents

1.1 Foreword

Thank you for choosing a SIGMA SPORT bike computer. Your new ROX 6.0 will be a reliable companion for your rides for years to come. To familiarize yourself with and learn how to use the many functions of your new bike computer, please read these operating instructions carefully.

Enjoy the ride with your new ROX 6.0!

The ROX 6.0 is a multi-functional bike computer that provides you with broad information both during and after your rides:

- Speed, time, distance, altitude, heart rate, and intensity zones.
- Download ride data to your PC or Mac for detailed evaluation

1.2 Contents

<p>ROX 6.0 bike computer</p> 	<p>Bracket</p> 
<p>STS speed transmitter</p> 	<p>Spoke magnet</p> 

Wristband	R1 STS Comfortex+ chest strap
Battery compartment key	Attachment materials (cable ties, O-ring)
ROX 6.0 quick start guide	

1.2.1 Optional accessories

Docking station	Wired bracket
STS cadence transmitter (incl. with ROX 6.0 CAD only)	Cadence magnet (incl. with ROX 6.0 CAD only)

1.3 ROX 6.0 functions

The ROX 6.0 is a versatile bike computer that can measure your altitude, speed, cadence, and heart rate.

(Cadence - ROX 6.0 CAD only, or with purchase of optional cadence kit)

All current values – current speed, current altitude, current heart rate, current cadence, and current lap – can be easily viewed on the large display.

The ROX 6.0 has classic bike computer features such 2 programmable wheel sizes (automatically detected with the STS speed transmitter), an automatic start/stop function, and several altitude calibration options.

The separate wrist strap also enables you to use your ROX 6.0 for hiking and running.

1.3.1 PC interface

The ROX 6.0 can be connected to a PC or Mac. The optional docking station enables you to transmit data between your PC and the ROX 6.0.

You can also set up the ROX 6.0 on the PC and then transmit the settings to the bike computer.

2 Attaching the ROX 6.0 and initial use

Note

See the quick start guide for detailed mounting instructions.

2.1 Attaching the bracket

- Attach to the handlebars or stem
- Remove the yellow foil from the bracket (permanent attachment)
- The bracket can be attached using either cable ties (permanent attachment) or the O-rings.

See attachment figures **1.1** **1.2** **1.3** **1.4**

2.2 Attaching the transmitter – speed and cadence

- Both transmitters can be attached using either cable ties (permanent attachment) or the O-rings.

See attachment figures **2.1** **3.1**

2.3 Attaching the magnets – speed and cadence

See attachment figures **2.3** **3.2**

2.4 Putting on the chest belt

- Slightly moisten electrodes with water or cardio gel.

See attachment figures **4.1** **4.2** **4.3** **4.4**

2.5 Setting up BIKE 2

- **CAUTION:**
To switch the STS speed transmitter to “bike 2”, use a ballpoint pen to press and hold the small button on the back of the transmitter until a red LED flashes. (5 sec) (red LED: bike 2; green LED: bike 1).

See attachment figure **6.1**

2.6 Attaching the SIGMA ROX 6.0 to the bracket

See attachment figure **6.2**

2.7 Initial use

To preserve battery life, the ROX 6.0 comes in “deep sleep mode”. Simultaneously press and hold the MODE 1 + SET buttons for five seconds to awaken the ROX 6.0 from deep sleep mode.

The ROX 6.0 jumps to the setting mode [Section 4, pg 16].

2.8 Synchronizing the transmitters

To synchronize the transmitters, the ROX 6.0 must be clicked into the handlebar or hiking wristband bracket.

The zeros of the speed, cadence, and heart rate values flash while the respective transmitters are being synchronized.

Once synchronization is complete, the respective values appear on the ROX 6.0's display.

2.8.1 Synchronizing the speed

There are two options for synchronizing the speed:

- Start cycling – the receiver usually synchronizes with the transmitter after five wheel rotations.
- Spin the front wheel until the mph information appears on the display.



2.8.2 Synchronizing the cadence

There are two options for synchronizing the cadence:

- Start cycling – the receiver usually synchronizes with the transmitter after five pedal rotations.
- Turn the pedals until the current cadence appears on the display.



2.8.3 Synchronizing the chest belt

Moisten the electrodes on the chest belt and put it on.

Move within 100 cm (approx 36 inches) the ROX 6.0 or get onto your bike. The ROX 6.0 usually synchronizes with the chest belt in less than 10 seconds.

The current heart rate then appears on the display.





2.8.4 Resetting the synchronization

If a transmitter does not display any values or the wrong transmitter is synchronized, the synchronization can be reset.

- 1 Press and hold the **Mode 1** button for three seconds.
"Sync. RESET" flashes on the display.
- 2 The zeros of the speed, cadence, and heart rate values flash again while the respective transmitters are being synchronized.

3 Operating concept

3.1 Button functions

Reset button

Use this button to scroll backward in a menu level.

Press and hold the button to zero all the data for the current trip.

Mode 2 button

Press this button to scroll through the Mode 2 functions (heart rate functions etc.) or forward in a menu level.

Lap button

Press this button to start a new lap.

Press and hold the button to open the lap view.

Set button

Press this button to store the values entered.

Press and hold the button to open the basic settings.

Mode 1 button

Press this button to scroll through the Mode 1 functions (bike and altitude functions).

Press and hold the button to re-synchronize the transmitters.



3.1.1 Button functions in bike mode

Mode 1 functions

Trip distance
Ride time
Ø speed
Max. speed
Ø cadence
Altitude +/-
Altitude profile
Max. altitude
Lap distance
Lap time

Mode 2 functions

Target zone/% max. heart rate
Intensity zones
Ø heart rate
Max. heart rate
Calories
Clock
Stopwatch
Countdown
Temperature
Total distance
(Bike 1, Bike 2 and Bike 1 + Bike 2)
Total time
(Bike 1, Bike 2 and Bike 1 + Bike 2)
Total altitude
(Bike 1, Bike 2 and Bike 1 + Bike 2)
Total calories

3.1.2 Button functions in hiking mode

Mode 1 functions

Hiking time
Target time
Trip altitude +/-
Max. altitude

Mode 2 functions

Training zone/% max. heart rate
Intensity zones
Ø heart rate
Max. heart rate
Calories
Clock
Countdown
Temperature
Total hiking time
Total hiking altitude
Total calories

3.2 Display structure

The ROX 6.0's display is divided into three main areas:

3.2.1 Top display segment

This displays four current values.

- ♥ Current heart rate (only if you are wearing the chest belt)
- ⬆️⬆️ Heart rate above or below the target zone
- 🚲 Current cadence (only if the cadence transmitter has been attached, optional accessory)
- ⬆️ Current altitude (permanent)
- 🏁 Current lap number (permanent)

3.2.2 Middle display segment

This displays your current speed plus other icons:

- 🕒 Bike I - bike II icon
- ⬆️ Speed compared to average
- MPH Unit of measure (km/h or mph)
- 🕒 Stopwatch active
- 🕒 Countdown active
- 🕒 Average speed (only in lap view)

3.2.3 Bottom display segment

This displays your currently selected function.

Press the **Mode 1** (see 3.1.1) and **Mode 2** (see 3.1.2) buttons to select the individual functions.

Press the **Mode 1** or **Mode 2** buttons to scroll forward. Press the **Set** or **Reset** buttons to scroll backward.





4 Basic settings

Press and hold the **Set** button for three seconds. "Setting OPEN" flashes on the display. The preset language then appears.

If you are using the ROX 6.0 for the first time and awakening it from deep sleep mode, it will automatically jump to setting mode without pressing and holding the **Set** button.

Caution

The ROX 6.0 can also be set during a ride. Not advised and please do so with caution.



4.1 Setting the language

- 1 Press the **Mode 1** button to switch to the preset language.
- 2 Press the **Set** button. The display flashes.
- 3 Press **Mode 2** or **Reset** to select the desired language.
- 4 Press the **Set** button to save your setting. "Set OK" appears on the display.



4.2 Setting the unit of measure

- 1 Press the **Mode 1** button to switch to the preset unit.
- 2 Press the **Set** button. The display flashes.
- 3 Press **Mode 2** or **Reset** to switch between km/h and mph.
- 4 Press the **Set** button to save your setting. "Set OK" appears on the display.



4.3 Setting the air pressure at sea level

Explanations about this function can be found in section "7 Altitude measurement (IAC)".

- 1 Press the **Mode 1** button to switch to the preset air pressure.
- 2 Press the **Set** button. The display flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Set** button to save your setting. "Set OK" appears on the display.



4.4 Setting the actual altitude

Explanations about this function can be found in section “7 Altitude measurement (IAC)”.

- 1 Press the **Mode 1** button to switch to the preset altitude.
- 2 Press the **Set** button. The first digit for entry flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the next digit.
- 5 Press the **Set** button to save your setting.
“Set OK” appears on the display.



4.5 Setting the home altitude

Explanations about this function can be found in section “7 Altitude measurement (IAC)”.

- 1 Press the **Mode 1** button to switch to the preset start altitude.
- 2 Press the **Set** button. The first digit for entry flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the next digit.
- 5 Press the **Set** button to save your setting.
“Set OK” appears on the display.



4.6 Setting the wheel size for bike 1 or bike 2

- 1 Press the **Mode 1** button to switch to the preset wheel size 1 or wheel size 2.
- 2 Press the **Set** button. The first digit for entry flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the next digit.
- 5 Press the **Set** button to save your setting.
“Set OK” appears on the display.

4.6.1 Calculating the wheel size

There are three ways to determine the wheel size:

- Follow instructions in Figure A or B
- Find in the table (Figure C) based on tire size.

km/h:
WS = mm x 3.14
mph:
WS = mm x 3.14

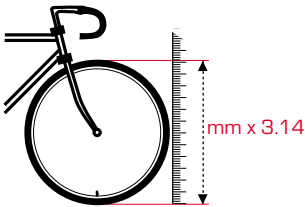


Figure A

km/h:
WS = mm
mph:
WS = mm

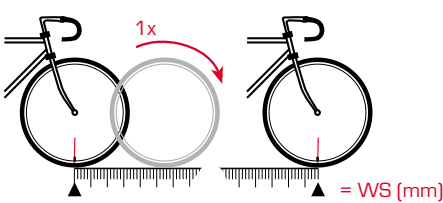


Figure B

ETRTO			ETRTO		
12 1/2 x 1.75			12 1/2 x 1.75		
Tire Size		WS mph	Tire Size		WS mph
16x1.75x2	47-305	1272	27.5x2.0	54-584	2154
20x1.75x2	47-406	1590	27.5x2.1	56-584	2170
24x1 3/8A	37-540	1948	27.5x2.2	58-584	2186
24x1.75x2	47-507	1907	27.5x2.25	60-584	2194
26x1	23-571	1973	28x1.5	40-622	2224
26x1.5	40-559	2026	28x1.75	47-622	2268
26x1.6	44-559	2051	28x1 1/2	40-635	2265
26x1.75x2	47-559	2070	28x1 3/8x1 5/8	37-622	2205
26x1.9	50-559	2089	29x2.0	54-622	2290
26x1.95	52-559	2105	700x18C	18-622	2102
26x2	54-559	2114	700x20C	20-622	2114
26x2.1	56-559	2128	700x23C	23-622	2133
26x2.125	57-559	2133	700x25C	25-622	2146
26x1 3/8	37-590	2105	700x28C	28-622	2159
26x1 3/8x1 1/2	37-584	2086	700x32C	32-622	2174
26x3/4	20-571	1954	700x35C	37-622	2205
27x1 1/4	32-630	2199	700x38C	38-622	2217
27x1 1/4 Fifty	28-630	2174	700x40C	40-622	2224

Figure C



4.7 Setting the clock

- 1 Press the **Mode 1** button to switch to the preset time.
- 2 Press the **Set** button. The hours digit flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to move to the minutes.
- 5 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 6 Press the **Set** button to save your setting.
"Set OK" appears on the display.



4.8 Setting the date

- 1 Press the **Mode 1** button to switch to the preset date.
- 2 Press the **Set** button. The year flashes.
- 3 Press the **Mode 2** or **Reset** button to increase or decrease the year value respectively and the **Set** button to save your entry.
- 4 Press the **Mode 2** or **Reset** button to increase or decrease the month value respectively and the **Set** button to save your entry.
- 5 Press the **Mode 2** or **Reset** button to increase or decrease the day value respectively and the **Set** button to save your entry.
- 6 Press the **Mode 2** or **Reset** button to set the date format (dd.mm.yy or mm/dd/yy) and the **Set** button to save your entry. "Set OK" appears on the display.



4.9 Setting your age

- 1 Press the **Mode 1** button to switch to the preset age.
- 2 Press the **Set** button. The display flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Set** button to save your setting. "Set OK" appears on the display.



4.10 Setting your weight

- 1 Press the **Mode 1** button to switch to the preset weight.
- 2 Press the **Set** button. The display flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Set** button to save your setting. "Set OK" appears on the display.



4.11 Setting your gender

- 1 Press the **Mode 1** button to switch to the preset gender. (The ROX 6.0 is preset to "male" by default)
- 2 Press the **Set** button. The display flashes.
- 3 Press **Mode 2** or **Reset** to set your gender.
- 4 Press the **Set** button to save your setting. "Set OK" appears on the display.



4.12 Setting the maximum heart rate

- 1 Press the **Mode 1** button to switch to the preset maximum heart rate.
- 2 Press the **Set** button. The display flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Set** button to save your setting. "Set OK" appears on the display.



4.13 Setting the training zone

The ROX 6.0 has three target zones. The target zones "Fitness" and "Fat burn" are automatically calculated based on your maximum heart rate. The "Individual" target zone, can be customized based on your own heart rate values.

- 1 Press the **Mode 1** button to switch to the preset training zone.
- 2 Press the **Set** button. The display flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the desired training zone limits respectively.
- 4 Press the **Set** button to save your setting. "Set OK" appears on the display.

Note

During a ride, you will be notified if you go above or below the target zone limits. A zone indicator arrow appears on the display next to the heart rate and an optional beeping sound is emitted.

4.13.1 Displaying the training zone in normal mode

You can also obtain a graphical image of the area in which you are currently training:

- 1 In normal mode, press **Mode 2** to switch to the target zone/% max. heart rate display.
- 2 A three-part bar in the bottom display segment shows you the area of the preset target zone that you are currently in.



4.14 Setting the intensity zones 1, 2, 3, and 4

The ROX 6.0 has four intensity zones, which make it easier to control your long term training. The values are automatically calculated based on your maximum heart rate. You can also customize the values for the individual intensity zones.

- 1 Press the **Mode 1** button to switch to the preset intensity zone 1, 2, 3, or 4.
- 2 Press the **Set** button. The lower zone limit flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the upper zone limit.
- 5 Press the **Mode 2** or **Reset** button to increase or decrease the value respectively and the **Set** button to save your entry.
"Set OK" appears on the display.

Note

During a ride, you can view the intensity zone function with a % distribution for your current training session.

4.14.1 Displaying the intensity zones in normal mode

You can also obtain a graphical image of the area in which you are currently training:

- 1 In normal mode, press **Mode 2** to switch to the intensity zones screen.
- 2 The four intensity zones are graphically displayed in the bottom display segment.
- 3 An arrow shows you which zone you are currently training in.



4.15 Setting the total distance for bike 1 or bike 2

You can use this option to enter existing values (e.g. transferred from your old device). New values are then added to these.

- 1 Press the **Mode 1** button to switch to the total distance for bike 1 or bike 2.
- 2 Press the **Set** button. The first digit for entry flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the next digit.
- 5 Press the **Set** button to save your setting.
"Set OK" appears on the display.

Important Note:

00.080 mi is equivalent to 80 miles.



4.16 Setting the total trip time for bike 1 or bike 2

You can use this option to enter existing values (e.g. transferred from your old device). New values are then added to these.

- 1 Press the **Mode 1** button to switch to the total trip time for bike 1 or bike 2.
- 2 Press the **Set** button. The first digit for entering the hours value flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the next digit.
- 5 Press the **Set** button to save your setting. The minutes value flashes.

- 6 Press **Mode 2** or **Reset** to increase or decrease the minutes value respectively.
- 7 Press the **Set** button to save your setting.
"Set OK" appears on the display.

Important Note:

0.005 h is equivalent to 5 hours.

4.17 Setting the total hiking time

You can use this option to enter existing values (e.g. transferred from your old device). New values are then added to these.

- 1 Press the **Mode 1** button to move to the total hiking time.
- 2 Press the **Set** button. The first digit for entering the hours value flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the hours value respectively. Press the **Mode 1** button to switch to the next digit. Press the **Set** button to save your setting.
- 4 Press **Mode 2** or **Reset** to increase or decrease the minutes value respectively.
- 5 Press the **Set** button to save your setting.
"Set OK" appears on the display.



4.18 Setting the total altitude for bike 1 or bike 2

You can use this option to enter existing values (e.g. transferred from your old device). New values are then added to these.

- 1 Press the **Mode 1** button to switch to the altitude for bike 1 or bike 2.
- 2 Press the **Set** button. The first digit for entry flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the next digit.
- 5 Press the **Set** button to save your setting.
"Set OK" appears on the display.

Important Note:

01.779 ft is equivalent to 1,779 ft (The display will show 1.779 ft).



4.19 Setting the total hiking altitude

You can use this option to enter existing values (e.g. transferred from your old device). New values are then added to these.

- 1 Press the **Mode 1** button to move to the total hiking altitude.
- 2 Press the **Set** button. The first digit for entry flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the next digit.
- 5 Press the **Set** button to save your setting.
"Set OK" appears on the display.



4.20 Setting the total calories for bike 1 or bike 2

You can use this option to enter existing values (e.g. transferred from your old device). New values are then added to these.

- 1 Press the **Mode 1** button to switch to the total calories for bike 1 or bike 2.
- 2 Press the **Set** button. The first digit for entry flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the next digit.
- 5 Press the **Set** button to save your setting.
"Set OK" appears on the display.

Important Note:

06.537 kcal is equivalent to 6,537 calories.



4.21 Setting the total hiking calories

You can use this option to enter existing values (e.g. transferred from your old device). New values are then added to these.

- 1 Press the **Mode 1** button to switch to the total hiking calories.
- 2 Press the **Set** button. The first digit for entry flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to switch to the next digit.
- 5 Press the **Set** button to save your setting.
"Set OK" appears on the display.



4.22 Activating the zone alarm

- 1 Press the **Mode 1** button to switch to the zone alarm.
- 2 Press the **Set** button. The current setting flashes.
- 3 Press **Mode 2** or **Reset** to switch the zone alarm on or off respectively.
- 4 Press the **Set** button to save your setting.
"Set OK" appears on the display.

Note

The zone alarm beeps during your ride if you are outside the limits of the selected training zone.



4.23 Setting the contrast

- 1 Press the **Mode 1** button to switch to the preset contrast.
- 2 Press the **Set** button. The display flashes.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
(1=weak/3=strong)
- 4 Press the **Set** button to save your setting.
"Set OK" appears on the display.



4.24 Exiting the basic settings

Press and hold the **Set** button for three seconds to exit the basic settings.
"Setting CLOSE" flashes on the display.

5 General ROX 6.0 functions

5.1 Display backlight



The backlight function is switched on/off by simultaneously pressing the **Set** and **Reset** buttons. "Light on/Light off" briefly appears on the display.


The display lights up when any button is pressed; the respective function only opens when the button is pressed a second time.


Note


The backlight is not available during synchronization! Avoid using the backlight unnecessarily to conserve the battery.

5.2 Speed comparison



If the current speed differs from the average speed, this difference is shown by either of two arrows .

If the current speed is below the average speed,  is displayed.

If the current speed is above the average speed,  is displayed.

If the current speed is more or less equivalent to the average speed, no arrow is displayed.

5.3 Lap counter



You can use the lap counter to record laps (or intervals) after covering a certain distance or time. This enables you to compare your performance throughout interval training.

Press the middle button (**LAP**) to end the current lap and automatically start a new one. The lap distance and lap time of the last lap are alternately displayed for eight seconds.

The lap distance and lap time are displayed in the bottom display segment.

The average heart rate, average cadence, and lap number are shown in the top display segment. The average speed for the last lap is shown in the middle display segment.

The display then jumps back to the previous view mode.



5.4 Opening the lap view

- 1 Press and hold the middle button (**LAP**) for three seconds. "Lap view OPEN" flashes on the display.

Press the **Set** and **Mode 1** button to switch between the following values: lap time, time since start, lap distance, distance since start, max. speed, max. heart rate, calories.

The average heart rate, average cadence, altitude ascent, and lap number are shown in the top display segment. The average speed for the lap is shown in the middle display segment.

- 2 Press the **Reset** and **Mode 2** button to switch between the individual laps.
- 3 Press and hold the **LAP** button for three seconds to exit the lap view. "Lap view CLOSE" flashes on the display.

5.5 Calibrating the start altitude

Simultaneously press and hold the **Mode 1** and **Mode 2** buttons for three seconds to calibrate the start altitude you have preset. "Start altitude" flashes on the display.

If the start altitude has been calibrated, "Set OK" appears on the display.

Explanations about this function can be found in section "7 Altitude measurement (IAC)".




5.6 Stopwatch

- 1 Press the **Mode 2** button to move to the stopwatch.
- 2 Press the **Set** button to start and stop the stopwatch.
If the stopwatch is running, the icon ⌚ appears on the display.
- 3 Resetting the stopwatch:
Press and hold the **Reset** button for three seconds.



5.7 Countdown

- 1 Press the **Mode 2** button to switch to the countdown.
- 2 Press and hold the **Set** button for three seconds. "Countdown SET" flashes on the display.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to move to the next digit.
- 5 Press the **Set** button to save your setting.
"Set OK" appears on the display.

- 6 Press the **Set** button to start and stop the countdown.
If the countdown is running, the icon  appears on the display.
The icon flashes once the countdown has reached zero.
- 7 Resetting the countdown to the configured start value:
Press and hold the **Reset** button for three seconds.



5.8 Setting the trip climb or descent

The trip ascent (+) and descent (-) are separately displayed.

Switch between trip ascent (+) and descent (-) as follows:

- 1 Press the **Mode 1** button to switch to Trip Climb.
- 2 Press and hold the **Set** button for three seconds. "Trip Climb/Desc" flashes on the display.
- 3 Press **Mode 2** to switch the display to Trip Climb (+) or Descent (-).
- 4 Press the **Set** button to save your setting.
"Set OK" appears on the display.



5.9 Resetting trip data

- 1 Press and hold the **Reset** button for more than three seconds.
- 2 "Trip data RESET" flashes on the display.

Use this function to reset the following values to zero:

Trip distance, ride time, \emptyset speed, max. speed, \emptyset cadence, altitude +/-, altitude profile, max. altitude, lap distance, lap time, intensity zones, \emptyset heart rate, max. heart rate, calories.

5.10 Total values for bike 1 and bike 2

If you only use the ROX 6.0 on one bike, only the total values for the first bike will be displayed.

If you also use a second bike, the total values are displayed under "bike 1", "bike 2" and "bike 1+2".



5.11 Service interval

The optional service interval notifies you once a set distance has been ridden. The service interval is an on screen reminder for regular bike maintenance. The service interval can only be set with a Universal Fast Setting Box (UFSB) at your local bike shop. Once the preset distance has been reached 'Inspection' appears on the display. Press any button to clear this message.

Note:

The Service Interval default is OFF

5.12 Transport mode

If your bike is transported on a bike rack or in the car (if the ROX 6.0 is clicked into the bracket), the integrated motion sensor switches the ROX 6.0 to "transport mode". "Transport" appears on the display. Press any button to exit this mode.

5.13 PC interface/Downloadable

The ROX 6.0 is PC and Mac-compatible. After purchasing the optional SIGMA DATA CENTER software and docking station, you can quickly and effortlessly download your current ride data to your PC. The ROX 6.0 saves the current values every 10 seconds for rides lasting up to 19 hours. The ride data can be graphically displayed in the DATA CENTER.

Note

The SIGMA DATA CENTER software and docking station can be ordered from the SIGMA SHOP at www.sigma-data-center.com.

5.14 Wired speed transmission

The ROX 6.0 can be retrofitted with a wired speed transmitter to measure the speed (the cadence and heart rate transmission remain wireless).

6 Hiking with the ROX 6.0

The ROX 6.0 can also be used as a hiking computer. Please use the included wristband for hiking or running. When the ROX 6.0 is attached to this wristband, all the bike functions are hidden (but still remain saved and can be accessed on your next bike trip). Only the hiking-related functions remain. You can use your ROX 6.0 with altitude and heart rate information for hiking, climbing, skiing, running, or other types of sport.

6.1 Synchronizing the chest belt

Slightly moisten the electrodes and put on the chest belt.


Attach the ROX 6.0 to the wristband. The zeros for your current heart rate flash. The ROX 6.0 synchronizes with the chest belt in less than 10 seconds.

The current heart rate then appears on the display.



6.2 Starting the hiking time

The hiking time is started and stopped by pressing the middle function button (LAP).

If the hiking time is running, the icon  appears on the display.



6.3 Setting the target time

- 1 Press the **Mode 1** button to move to the target time.
- 2 Press and hold the **Set** button for three seconds. "Target time SET" flashes on the display.
- 3 Press **Mode 2** or **Reset** to increase or decrease the value respectively.
- 4 Press the **Mode 1** button to move to the next digit.
- 5 Press the **Set** button to save your setting. "Set OK" appears on the display.
- 6 As soon as you start the hiking time, the target time starts to count down.
- 7 Resetting the target time to the configured start value:
Press and hold the **Reset** button for three seconds.

Note

If the target time has been exceeded, a minus sign is displayed. Set the target time to 00:00:00 to deactivate it.



6.4 Resetting hiking trip data

1 Press and hold the **Reset** button for more than three seconds.

2 "Trip data RESET" flashes on the display.

Use this function to reset the following values to zero:

Hiking time, trip altitude +/-, max. altitude, intensity zones, Ø heart rate, max. heart rate, calories.

7 Altitude measurement (IAC)

If the device “goes to sleep” (clock and model name appear on the display), the last displayed current altitude is stored. When it ‘wakes up’, this stored current altitude is used as a reference altitude. The ROX 6.0 essentially calibrates itself.

The barometric air pressure is activated by the movement of the bike and the ROX 6.0, even if the ROX 6.0 is in sleep mode. This means that the current altitude is regularly updated when you change location. The integrated motion sensor is so sensitive that the system even functions in a car.

There are three small holes on the back of the ROX 6.0 for measuring the air pressure. These holes must remain open.

Caution

Do not insert sharp objects into the measurement holes!

7.1 Calibrating the altitude

The ROX 6.0's altitude measurement is determined based on barometric air pressure. Any change to the weather means a change to the air pressure, which can lead to a change to your current altitude. To compensate for these changes in air pressure, you must enter a reference altitude into the ROX 6.0 (known as calibration).

The ROX 6.0 can be calibrated 3 different ways:

1. Start altitude

The start altitude is the altitude of your usual location (normally your home) and can be found on a map. It is set on the ROX 6.0 once (see section “4.5 Setting the start altitude”) and can be calibrated within three seconds (see section “5.5 Calibrating the start altitude”). The start altitude is permanently stored in the ROX 6.0 (including after changing the battery).

2. Current altitude

The current altitude is the altitude of the place in which you are currently located, irrespective of your start altitude (e.g. the trip start location, an alpine lodge or other locations). The current altitude is used if you are out on your bike and altitude information is provided.

3. Air pressure at sea level

If you are at an unknown altitude, you can enter the “air pressure reduced to sea level” to calculate the current altitude. The air pressure reduced to sea level can be found online, in the newspaper, or at airports.

8 Important information, troubleshooting, FAQ

8.1 Important information

8.1.1 ROX 6.0 water resistance

The ROX 6.0 is watertight. It can be used in the rain without any risk of damage. The buttons can be pressed.

8.1.2 Water resistance of the transmitters (optional accessory)

STS speed transmitter, STS cadence transmitter, and STS heart rate transmitter

Watertight and suitable for many sporting activities.

8.1.3 Chest belt care (optional accessory)

The COMFORTEX+ cloth chest belt is machine washable on the delicate cycle. Conventional laundry detergent is recommended.

Note

Bleach or detergents containing bleach must not be used. Do not use soap or fabric softener!

Do not dry clean the COMFORTEX+ chest belt. Air dry only. Lay flat to dry and do not iron.

8.1.4 Training advice

Consult your physician before starting an exercise program.

If you have a pacemaker, please check with your physician prior to use.

8.2 Troubleshooting

No speed displayed

- Is the computer correctly fastened into the bracket?
- Have you checked the contacts for oxidation/corrosion?
- Have you checked the distance between the magnet and the STS speed transmitter (max. 12 mm or 1/2 inch)?
- Have you checked whether the magnet is magnetized?
- Have you checked the speed transmitter's battery status?

No cadence displayed

- Have you checked the distance between the magnet and the cadence transmitter (max. 12 mm or 1/2 inch)?
- Have you checked whether the magnet is magnetized?
- Have you checked the cadence transmitter's battery status?

No heart rate displayed

- Are the electrodes damp enough?
- Is the chest belt correctly positioned against your body?
- Have you checked the heart rate transmitter's battery status?

Display blank

- Have you checked the ROX 6.0's battery status?
- Has the battery been correctly inserted (+ up)?
- Are the battery contacts ok (bend carefully)?

Display weak/slow

- Is the temperature too high (> 140 F) or too low (< 32 F)?

Incorrect speed displayed

- Have two magnets been attached?
- Is the magnet correctly positioned (parallel and centrally aligned to the speed transmitter)?
- Is the wheel size correct?

No synchronization

- Have you checked the distance between the magnet and the transmitter(s)?
- Is/are the battery/batteries in the transmitter(s) dead?
- Have you checked the transmitter's range?
- If you are using a hub dynamo, please change the transmitter's position.

“TOO MANY SIGNALS” displayed

- Please increase the distance from the other transmitters and press any button.

8.3 Frequently asked questions (FAQ)

Can I change the batteries myself?

All ROX 6.0 components have a battery compartment so that the user can change the batteries. When doing so, please ensure that the sealing ring is always correctly positioned before you close the battery compartment.

Can another person with a different bike computer/heart rate monitor cause interference?

The digital transmission system is coded. This almost entirely prevents interference between two different bicycle computers. When synchronizing the receiver with the transmitter, ensure that you are not in the vicinity of any other SIGMA ROX devices.

How long will the batteries in the transmitter and receiver last?

The battery life depends on how much the device is used and whether the backlight is used.

In general, the ROX 6.0 and all three transmitters are designed so that the battery lasts at least a year (based on one hour of use each day).

Is the STS transmission system compatible with other transmission systems (e.g. Bluetooth, ANT+, DTS etc.)?

No, the various transmission systems are not compatible with one another.

Why has the altitude changed even though I have not moved?

The ROX 6.0's altitude measurement is based on barometric altitude measurement. As the barometric air pressure constantly changes, the current altitude can change even though you have not moved.

The ROX 6.0 has a system that freezes the current altitude when the device goes into sleep mode. This guarantees a constant current altitude providing the computer is not regularly moved.

Why do I always have to calibrate the current altitude?

Since we use the barometric air pressure to determine the current altitude, the constant changes to the current air pressure lead to changes to the current altitude. To compensate for these changes and achieve an accuracy of +/- three feet in the current altitude information, a reference altitude should be specified for the ROX 6.0 before each ride. Entering this reference altitude is known as calibration.

9 Technical data

9.1 Max, min, and default values

	Unit	Min.	Max.
Bike			
Current speed	kmh/mph	0.0	199.8/124.2
Ø speed	kmh/mph	0.00	199.8/124.2
Max. speed	kmh/mph	0.00	199.8/124.2
Distance cycled	km/mi	0.00	9999.99
Current cadence	rpm	20	180
Ø cadence	rpm	20	180
Heart rate			
Current heart rate	bpm	40	240
Ø heart rate	bpm	40	240
Max. heart rate	bpm	40	240
% of the max. heart rate	%	0	240
Calories	kcal	0	99999
Time			
Ride time	hhh:mm:ss	00:00:00	999:59:59
Hiking time	hhh:mm:ss	00:00:0	999:59:59
Target time	hhh:mm:ss	00:00:0	999:59:59
Clock	hh:mm [12hr]	00:00	11:59
Date	mm/dd/yyyy	01.01.2013	12/31/2099
Stopwatch	h:mm:ss.1/10	0:00:00.0	9:59:59.9
Countdown	hh:mm:ss.1/10	00:00:00.0	9:59:59.9
Temperature			
Current temperature	°C/°F	-10.0/14.0	+70/+158
Altitude			
Current altitude	m/ft	-999/-999	4999/16999
Trip altitude ascent	m/ft	99999/99999	99999/99999
Trip altitude descent	m/ft	99999/99999	99999/99999
Max. altitude	m/ft	0	4999/16999
Laps			
Lap number	NO UNIT	0	99
Lap time	hhh:mm:ss	00:00:00	999:59:59
Time since start	hhh:mm:ss	00:00:00	999:59:59
Lap distance	km/mi	0	9999.99
Distance since start	km/mi	0	9999.99
Ø speed per lap	kmh/mph	0.00	199.8/124.2
Max. speed per lap	kmh/mph	0.00	199.8/124.2
Max. HR per lap	bpm	40	240

	Unit	Min.	Max.
Calories/lap	kcal	0	99999
Total values			
Total distance Bike 1/2 Bike 1+2	km/mi	0	99999
Total time Bike 1/2 Bike 1+2	mm:ss/hhh:mm:ss	00:00	999:59
Total altitude Bike 1/2 Bike 1+2	m/ft	0	99999
Total calories Bike 1/2 Bike 1+2	kcal	0	99999



9.2 Changing the batteries

Low battery warnings for the bike computer and transmitters (speed, cadence, and/or chest belt) appear on the display. After changing the battery, only the clock needs to be reset.

Bike computer **5.1**

- Use the tool provided to open the rear compartment.
- Remove the old battery, wait 1 minute
- Insert the new battery.
- Note the polarity!
- If the sealing ring is loose, reposition it.
- Use the tool provided to close the compartment.

Transmitter **5.2** **5.3** **5.4**

- Use the tool provided to open the compartment.
- Remove the old battery.
- Insert the new battery.
- Note the polarity!
- If the sealing ring is loose, reposition it.
- Use the tool provided to close the compartment.

9.3 Temperature, batteries

Bike computer

Ambient temperature +60°C/-10°C

Battery type CR 2450 (ref. no. 20316)

Speed transmitter

Ambient temperature +60°C/-10°C

Battery type CR 2032 (ref. no. 00342)

Cadence transmitter

Ambient temperature +60°C/-10°C

Battery type CR 2032 (ref. no. 00342)

Heart rate transmitter

Ambient temperature +60°C/-10°C

Battery type CR 2032 (ref. no. 00342)


10 Warranty and guarantee

We are liable to our contracting partners for defects in line with legal provisions. The warranty does not extend to batteries. In the event of a warranty claim, please contact the retailer from whom you purchased your bike computer. You can also send your bike computer, together with your receipt and all accessories, to the address below. Please ensure you pay sufficient postage.

SIGMA SPORT USA
3487 Swenson Ave.
St. Charles, IL 60174, U.S.A.

Toll free: 888-744-6277
E-mail: sigmarox@sigmasport.com

In the event of justified warranty claims, you will receive a replacement device. You will only be entitled to the model available at the time of replacement. The manufacturer retains the right to make technical modifications.

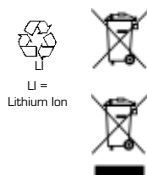

Batteries must not be disposed of in household waste (Battery Law)! Please take the batteries to an official collection point for disposal.

Electronic devices must not be disposed of in household waste. Please take the device to an official waste collection point.

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference
- 2 This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made to this equipment not expressly approved by SIGMA may void the FCC authorization to operate this equipment.

This Class B digital apparatus complies with Canadian ICES-003.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced technician for help.

11 Index

A

- Activating the training zone alarm 25
- Attaching the bracket 10

B

- Basic settings 16

C

- Calibrating the altitude 32
- Changing the batteries 38

D

- Display backlight 26

F

- Frequently asked questions 35

H

- Hiking functions 30
 - Setting the target time 30
 - Setting the total hiking altitude 24
 - Setting the total hiking calories 24
 - Starting the hiking time 30
 - Total hiking time 23

I

- Initial use 11

L

- Lap function 26
 - Opening the lap view 27

O

- Operating concept 13, 14
 - Button functions 13
 - Display structure 15
- Optional accessories 8

P

- PC interface 9, 29

R

- ROX 6.0 functions 9

S

- Setting bike 1-2
 - Total altitude 23
 - Total calories 24
 - Total distance 22
 - Total ride time 22
 - Wheel size 17
- Setting the countdown 27
- Setting the date 19
- Setting the intensity zone 21
- Setting the language 16
- Setting the time 18
- Setting the training zone 20
- Setting the units 16
- Stopwatch 27
- Synchronizing the sensors 11

T

- Technical data 36
- Troubleshooting 34

W

- Water resistance 33

SIGMA-ELEKTRO GmbH

Dr. -Julius-Leber-Straße 15
D-67433 Neustadt/Weinstraße

SIGMA SPORT USA

3487 Swenson Ave.
St. Charles, IL 60174, U.S.A.

SIGMA SPORT ASIA

4F, No.192, Zhonggong 2nd Rd.,
Xitun Dist., Taichung City 407, Taiwan

