


PanoComputer Wireless

User's Guide



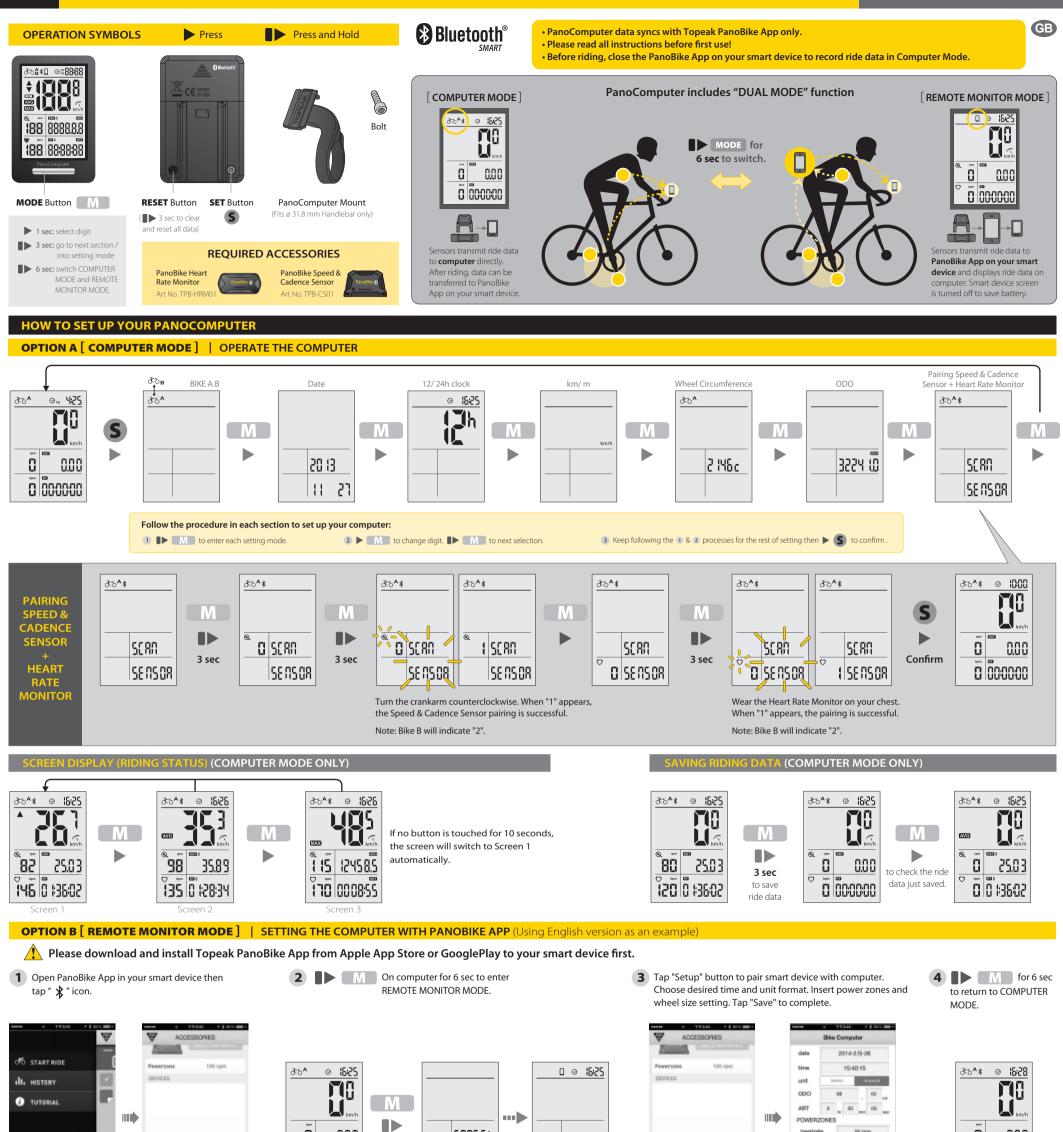


HOW TO OPERATE IN SECOND MONITOR MODE (SECOND MONITOR function) (Using English version as an example)

888

6 sec


1 D On computer for 6 sec to enter REMOTE MONITOR MODE.

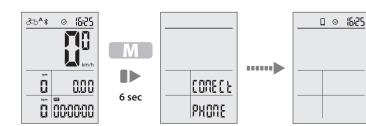





133R03

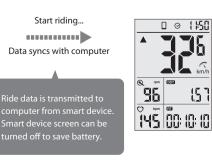



16

157

3 for 6 sec to return to COMPUTER MODE after riding.

0.00

I



Tap II to stop and save ride data to your smart device.

TOPEAK



TRANSMITTING RIDE DATA TO PANOBIKE APP (COMPUTER MODE ONLY) (Using English version as an example) 2 On Smart Device, open Topeak PanoBike App and 3 Tap " 🖓" to transfer new ride data to Topeak PanoBike App. 1 M On computer 4 A for 6 sec to for 6 sec to enter REMOTE tap "History" icon return to COMPUTER MODE. MONITOR MODE. ∇ HISTORY HISTORY □ ⊙ (5:21 t START RIDE Topeak Trip □ ⊙ 1625 ₹6^\$ ⊘ (6:28 0,38.3 II. HISTORY M Topeak Trip 0:33-48 TUTORIAL bika 5 **Topeak Trip** 0:57:04 0 Topeak Trip I 000 2月201 8 888888 After the transmitting, Topeak Trip 314R () 0.10.10 the current trip record The computer is ready to number will appear on transmit your riding data. screen. NOTE: Any transmitted data deleted from smart device history cannot Turn-on Bluetooth® on your smart device first. be recalled from PanoComputer HOW TO INSTALL PANOCOMPUTER **SLEEP MODE** DISPLAY FUNCTION SPECIFICATIONS INCREMENTS ACCURACY 199 km/h, 199 mi/h **Current Speed** 0.1 km/h or mi/h ±1 % 5 in COMPUTER MODE AVG Average Speed 199 km/h, 199 mi/h 0.1 km/h or mi/h ± 0.1 % During non-riding status, if no button is MAX 199 km/h, 199 mi/h 0.1 km/h or mi/h ∂©201 © \$^35 ± 0.1 % Maximum Speed DST **Trip Distance** 0.00~9999.99 km or m 0.1 km or m \pm 0.1 % ΥÐ ODO Accumulated Distance 0.00~99999.9 km or m Μ 0.1 km or m 2 Install the ± 0.1 % the computer will go into Sleep Mode. computer RT **Ride Time** 0:00:00~99:59:59 1 Second \pm 0.1 % 0.00 8 ART Accumulated Ride Time 0000:00~9999:59 1 Minute ± 0.1 % 3mm Allen Key LO Low Battery Indicator < 2.7 V 0 000000 1 Install the bracket on the handlebar. \odot 1 : 00 ~12 : 59 (12 H) 0 : 00 ~23 : 59 (24 H) 12H/ 24H clock 1 Minute + 0.003 % • Pace Indicator HOW TO RELEASE PANOCOMPUTER δδå Bike A and Bike B in REMOTE MONITOR MODE Q Current Cadence * 0~199 RPM 2 Release the \circ Current Heart Rate * 0~199 BPM computer * Bluetooth® System □ ⊙ 1000 SmartPhone Connected "Current Cadence" Requires optional PanoBike Speed & Cadence Sensor. Μ * "Current Heart Rate" Requires optional PanoBike Heart Rate Monitor 1 Sleep Mode after 2 minutes. Please pre Press the lever * Wheel circumference default: 2235 mm "MODE" to wake up **DETERMINE WHEEL CIRCUMFERENCE** METHOD A) CHOOSE FROM WHEEL CIRCUMFERENCE DATA BELOW METHOD B) MEASURE WHEEL CIRCUMFERENCE Wheel Circumference Wheel Circumference Tire Size Designation Tire Size Designation 40-305 16x1.50 1185 1920 KM/H: Wheel Circumference 47-305 16x1.75 1195 20-571 650x200 1938 34-305 = mm x 3.14 16x2.00 1245 23-571 650x23C 1944 **SPECIFICATION** 18x1.50 1340 650x25 1952 27.5x2.25(650B) 47-355 18x1.75 1350 57-584 2217 Tech: Bluetooth® Smart (BLE 4.0) super low energy technology

40-406 20x1.50 1490 60-584 27.5x2.35(650B) 2230 20x1.75 1515 700C Tubular 47-406 2130 47-507 24x1.75 1890 20-622 700x200 2086 50-507 24x2.00 1925 23-622 700x23C 2096 26x1.50 2010 25-622 700x25 2105 47-559 26x1.75 2023 28-622 700x280 2136 50-559 26x1.95 2050 30-622 700x300 2146 26x2.10 700x32C 2155 54-559 2068 32-622 56-559 26x2.20 2083 35-622 700x350 2168 38-622 700x38C 2180 54-622 29x2.10 2288 56-622 29x2.00 57-622 29x2.25 2320

LOW BATTERY

Battery < 2.7 V



IMPORTANT NOTE

For your safety, PanoComputer has a Max Heart Rate Alarm function. When Heart Rate exceed Max limit, the Heart icon will be shown in black. Set Max Heart Rate limit in Topeak PanoBike App.

MAX HEART RATE ALARM

₹δ^\$


815


⊙ 16:25

85.06

15808

* "HEART RATE" Requires optional PanoBike Heart Rate Monitor.

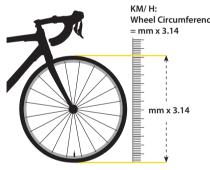

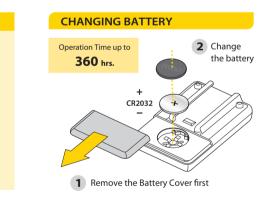

ΤΟΡΕΑΚ ΡΑΝΟΒΙΚΕ ΑΡΡ		
TOPEAK	The ultimate cycling performance app that utilizes your smartphone's powerful <i>Bluetooth</i> [®] Smart capabilities and transforms it into your bike computer, personal training	

and health management device. This app combines the functions of phone, cycle computer, GPS, music player, camera, and heart rate monitor (requires purchase of separate PanoBike Heart Rate Monitor) into one program that allows you to have loads of fun on your bike ride.

PanoComputer Syncs with PanoBike App only.

Mount: Handlebar Mount (ø 31.8 mm only)

Battery: CR2032 x 1 pc (included)

Waterproof: IPX 7

Transmission Range: <10 meter (33 ft)

Weight: 30 g / 1.06 oz (computer only)

Battery Lifetime (max.): 360 hours (1 hr/ day use) *

Operating temperature: -10°C ~ 50°C (14°F~122°F)

* Overall battery life is dependent on usage profile and battery condition.





🌙 App Store



- 1. CLEAR ALL DATA SETTING will clear all stored data.
- 2. CLEAR ALL DATA SETTING is required during FIRST SETUP or BATTERY CHANGE.
- 3. All data will be cleared when replacing the battery. Before changing battery, write down stored data ODO and ART.

bi fin data fin be eleared interrepidency foerbie enarging batter), finte doffi bioled data ob o and fin

- 4. The TOPEAK PANOCOMPUTER can be used in the rain but should not be intentionally submerged underwater.
- 5. Do not leave the computer exposed to direct sunlight when not riding the bicycle.
- 6. Do not disassemble the computer body or its accessories.
- 7. Check relative positions and gap between sensor and magnet periodically.
- 8. Do not use harsh chemicals to clean the computer body or its accessories.
- 9. Remember to pay attention to the road while riding.
- 10. Check the computer mount before each ride to ensure a secure connection.
- 11. Dispose of used batteries according to local regulations.

TROUBLE SHOOTING

Check the following before bringing unit in for repair.

PROBLEM	CHECK ITEMS	REMEDY
No display	1. Is the battery exhausted? 2. Is the battery installed correctly?	1. Replace the battery. 2. Make sure that the positive (+) pole of the battery is facing the battery cap.
No current speed or incorrect data	 Is it in setup mode? Are the relative positions and gap between sensor and magnet correct? Is the wheel circumference correct? 	 Refer to the data setting procedure and complete the adjustment. Refer to INSTALLATION and re-adjust correctly. Refer to CIRCUMFERENCE SETTING and enter correct value.
Irregular display		Refer to "Clear All Data setting" and initiate the computer again.
LCD is black	Did you leave the computer in direct sunlight when not riding the bicycle for a long while?	Place the computer body in the shade to return to normal state.
Display is slow	Is the temperature below -10°C (14°F)?	The unit will return normal state when the temperature rises.
No current heart rate data	 Is the chest strap being worn correctly? Is the battery of heart rate monitor exhausted? 	1. Make sure the position of chest strap is correct. 2. Replace the battery.

OPTIONAL ACCESSORIES



WARRANTY

2-year Warranty: All electronic and mechanical components against manufacturer defects only. Batteries are not covered under any implied warranty.

Warranty Claim Requirements

To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if the product is damaged due to user crash, abuse, system alteration, modification, or used in any way not intended as described in this manual.

* The specifications and design are subject to change without notice.

Please contact your Topeak dealer with any questions.

For USA customer service, call: 1-800-250-3068 Website: www.topeak.com



TOPEAK